Garage Door Opener , (VC1),(VC2)


From January 2011



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



No. 50 / 2

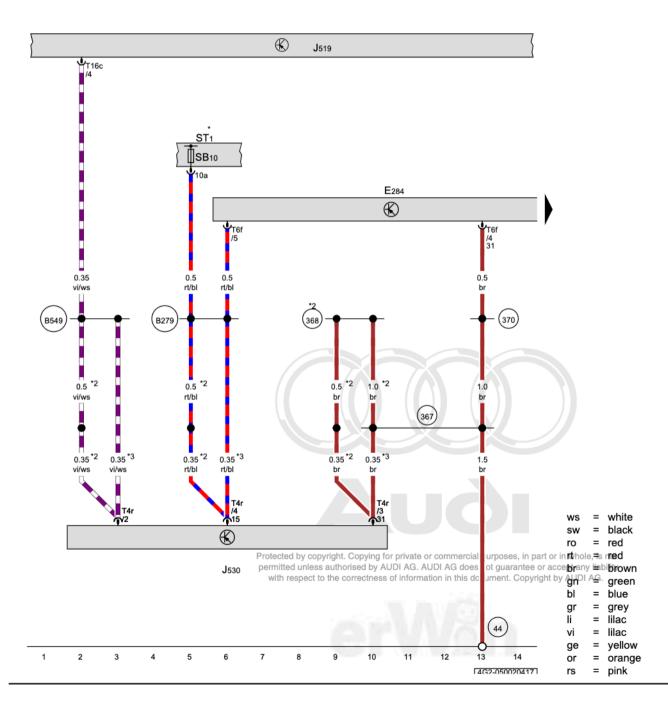

Garage Door Opener Control Head, Garage Door Opener Control Module

- E284 Garage Door Opener Control Head
 J519 Vehicle Electrical System Control Module
 J530 Garage Door Opener Control Module
 ST1 Fuse Panel 1
 SB10 Fuse 10 (On Fuse Panel B)
 T4r 4-Pin Connector
 T6f 6-Pin Connector
 T16c 16-Pin Connector


 44 Ground Connection on A-Pillar, Lower Left

 367 Ground Connection 2 (in Main Wiring Harness)

 368 Ground Connection 3 (in Main Wiring Harness)

 370 Ground Connection 5 (in Main Wiring Harness)

 B279 Positive Connection 3 (15a) (in Main Wiring Harness)
- B549 Lin Bus Connection 2 (in Main Wiring Harness)
- Refer to Applicable Wiring Diagram for Fuse Positions
- 2 Omitted as a Running Change
- *3 Running Change

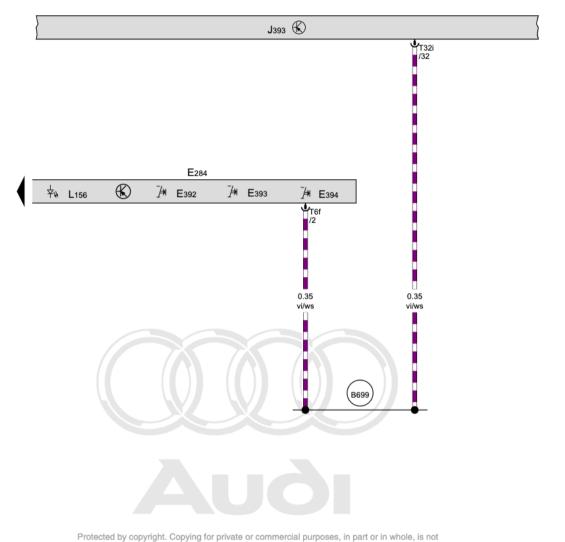

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

with respect to the correctness of information in this document. Copyright by AUDI AG.

24

25

27

4G2-050030417

17

Garage Door Opener Control Head, Garage Door Opener Button 1

E284 Garage Door Opener Control Head

E392 Garage Door Opener Button 1 E393 Garage Door Opener Button 2

E394 Garage Door Opener Button 3

J393 Comfort System Central Control Module

L156 Switch Illumination Bulb

T6f 6-Pin Connector

T32i 32-Pin Connector

(B699) Lin Bus Connection 4 (in Main Wiring Harness)

= white